

MOTOROLA CLIQ XT with MOTOBLUR syncs contacts posts, feeds, messages, e-mails, photos and much more—from sources like Facebook®, Twitter, MySpace, Gmail™, vour work e-mail, Picasa™, Photobucket™, LastFM—and serves it up just the way you want it.

Your phone =

Most of what you need is in the touchscreen and four simple kevs on the front:

 Home: Go to the home screen. Then, touch for apps.

Menu: Open menu options.

Back: Go back a screen.

Charge or

connect to PC.

Menu Key

Search: Open a Web search.

If you want a full keyboard (good for texting, browsing, or searching in your Contacts list), just turn the phone—the screen spins to stay right-side up.

Let's get you up and running. **Tip:** Your phone comes with a microSD memory card already installed. It's right next to your SIM card.

Caution: Before assembling, charging or using your

phone for the first time, please read the important

Safety, Regulatory & Legal information provided with

Create or log into a MOTOBLUR account. Enter your name, your email address (for account information), and a new MOTOBLUR password. Registration is secure, and should only take a few minutes.

Note: To use MOTOBLUR, please read the terms and conditions during registration and, if you agree, check Agree.

It's all in the touch:

- Touch: Choose an icon or option.
- Touch & Hold: Open options.
- Drag: Scroll or move slowly.
- Flick: Scroll or move quickly. Touch to stop.

Tip: If your screen goes to sleep, press Menu 🔡 to wake

The *home screen* gives you all your latest information one place. It's what you see when you turn on the phone or wallpaper, ringtone, and more—make it yours. press Home (a) from a menu.

Use the widgets, shortcuts and panels to see what's important to you—whether it's home, work or play. To make the home screen yours, see "Personalize".

Go ahead, add your personal touch. Change your widgets

 Home screen: To add something or change your wallpaper. touch and hold an empty spot until you see the Add to Home screen menu.

Ringer volume

Media volume

Phone ringtone

otification ringtone

udible selection SD card notification


Tip: To move or delete something, touch and hold it, then drag it to another spot, another panel, or the trash can. • Ringtones & sounds: Press Menu 📆 > Settings

> Sound & ringtones.








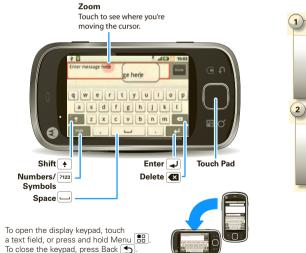



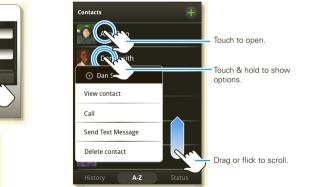





screen menu.





MOTOROLA, the Stylized M Logo, MOTORI UR and the MOTORI UR logo are.

trademarks or registered trademarks of Motorola Trademark Holdings, LLC, The

Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility

Inc. under license. Will is a Certification Mark of the Wireless Fidelity Alliance. In

Manual Number: 68014006001-A

screen, just touch or press Home a to open and close the app menu.

Tip: To find an app in the menu, press and hold Menu 🔠 to open a keypad, then type the app name. Want more? No problem: To download more apps touch 🔼 > 🗟 Market.

Note: You might not have some features. For details, ask your service provider.

Games

Contacts

Voice Mail

End Call

menus needed. Just touch **Dialer** from the home

Tip: During a call, press Home or Back to hide the active call display and use other apps. To reopen it. touch **Dialer**.

Touch a tab to open a list.

MOTOBLUR. View, search, and use them your way.

Touch **Contacts** in the home screen.

Alex Pico

Dan Smith

Kate Shunney

Keith Zang


Luke Carmody

Tip: When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster. To search the list, press and hold Menu 📆 to open a keypad, then type a name.

Now you have contacts like you've never had before Find out what everyone is doing. Touch your Happenings downloaded from your accounts and backed up on or **Messages** widgets to see the newest update, then:

- Inbox. • See more: Flick left to see more updates or messages.
- See details: Touch . Then, in Happenings, you can touch the social network's icon for more access
- Update status: You don't need to access each social network site to update your status. From the home screen, update all your social networks (Twitter, Facebook) all at once.

Tip: To add social network or email accounts. press Menu 🔛 > Settings > Accounts > Add account and sign in with that account's user name or email.

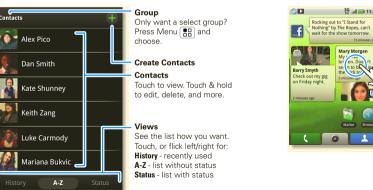

All of your messages stay in one place—text IM email

Facebook, and more, Touch Messaging > Universal

nas attachments

Tip: To type in a message, touch a text field to open the touchscreen keypad.

Alex Pico Mary Morgan Some guys have all the luck me Any type, just touch here. Right now, you're busy flexi Seth Rementer The cinnamon bun place is next to the store. It's like 8 h broken. Doesn't seem to be Touch to open a message. doing the trick today. Touch & hold to move, It's only a freelance gig, but pays... delete, and more. View comments Kate Shunney I have so much energy today, I have Add comment no IDEA whv. Marianna Bukvic

See it capture it share it! You'll even have time to relax some music

- Photos: Press Camera and press again to take your
- Videos: Press Camera > Menu > Camcorder. then press Camera to record your video. To see what you've taken, touch > \simeq Picture Gallery or **S** Video Gallery.
- Music: Touch > Music, to open the Connected Music Player and have access to apps, like My Music, Radio, Music Videos, News, Community, and Song Identification.

Thumbnail of you (Photos) last photo/video. See song lyrics in real-time.

Web & maps —

Browse download and search (of course) And if you need to know where you are or where you're going, we've got that covered too.

- Browser: Touch > Browser and surf to your heart's content using the super fast 3G and Wi-Fi connections
- Maps: Touch

 S → Google Maps to use the Google Maps™ you know and love. With built-in GPS, you'll have pinpoint navigation all the way.

Note: You might not have some features. For details, ask vour service provider.

Web Images Local News more •

Google

Google Search

My Location: Off - Turn On

Sign in - Preferences - Help

View Google in: Mobile | Classic

Press 🔡 to open 🗸 📩

Mobile Network: G. F. 3G

44 West Street

Lose the wires—press Menu 😬 > Settings > Wireless controls.

- Bluetooth: For handsfree calls and wireless music. touch Bluetooth settings and connect to your accessory.
- Wi-Fi: For fast internet access, touch Wi-Fi settings and connect to a home, office or hotspot network. For connection details, press Menu 🔛 > Advanced.

Tip: To quickly turn wireless features on or off, press and hold Power o until the power menu appears.

Here are some good things to know.

- Save Battery: Press and hold Power then touch GPS. Wi-Fi, or Bluetooth™ power to turn them off when not in use.
- Notification LED: To turn off the LED, press Menu > Settings > Display & security > Notification LED.
- See Recent Apps: Press and hold Home
- Search: Press Search Q


There's more help, more accessories, more free stuff We're here to help.

www.motorola.com/medialink.

www.motorola.com/mymotoblur

- Help: Check out the help center on your phone touch > Help Center.
- Accessories: Find more for your phone at www.motorola.com/products. Load your files: Download Media Link at

you can drag.

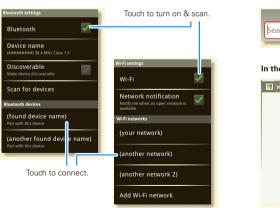





MOTOBLUR: Go see your MOTOBLUR account at







